



SHADE™


PULL CORD INSTRUCTIONS

HERE TO MAKE LIFE EASIER

These instructions are included to make setup easier when your anchors are very high and out of reach.


If your anchors are well within reach, you can skip this!

STEP 1 TIE 6" LOOP

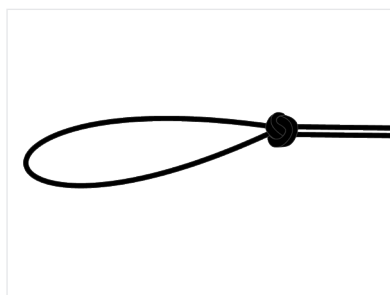


Tie off 6" loop at end of paracord.

STEP 2 TIE LOOP TO LATCH

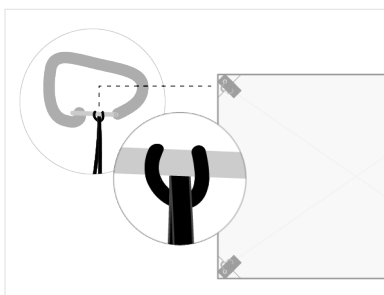


Use loop to tie girth hitch knot to latch on carabiner (on underside of shade).

STEP 3 FEED PARACORD THROUGH

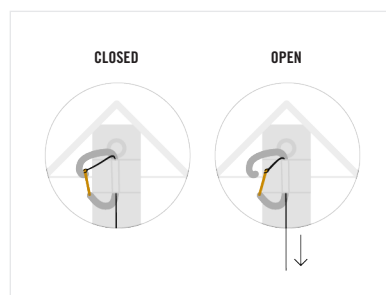

Move knot to top of latch and feed paracord through fabric loop holding carabiner.

STEP 4 ATTACH TENSION POLE

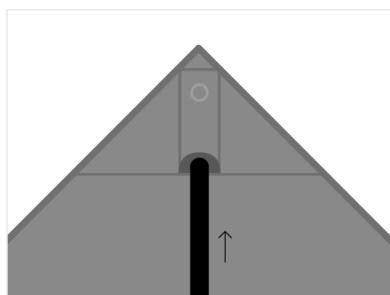

Flip shade over and insert tension pole in corner pocket. This will allow you to hoist up the carabiner to your anchor(s).

STEP 5 ATTACH CARABINER TO ANCHOR



Pull paracord down while using tension pole to reach your anchor. Release paracord to latch carabiner to anchor.

*Repeat steps on additional anchors if needed.
Feed paracord through loops on underside of shade and tie off to keep out of the way.*

**YOU'RE ALMOST DONE!
REFER TO ASSEMBLY
INSTRUCTIONS TO
FINISH THE SETUP.**

*More detailed instructions,
including videos, set-up tips, and FAQs
can be found at moonfab.co/setup.*

TIP: Often only one pull cord is needed. If affixing the shade fabric to the top of a tall van, for example, affixing a pull cord is helpful for attaching the shade fabric to the back corner of the van. The shade fabric corner that goes toward the front of the van can often be easily mounted/clipped when you have something to step up on (like stepping into the van through the door).

Once you've created your pull cord, keep it attached for easy set up every time!